

902






ClimAir®





ar comfort

- (D) Einbauanleitung
- (GB) Installation instructions
- (F) Consignes de montage
- (E) Instrucciones de montaje
- (RUS) Инструкция по монтажу и установке



QR-Code - Einbaufilm Windabweiser
QR-Code - Fitting film wind deflector

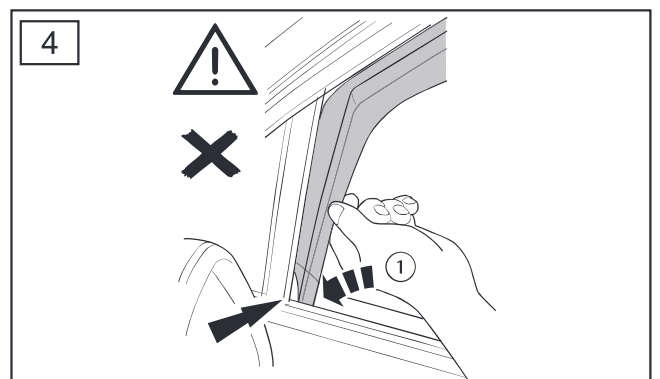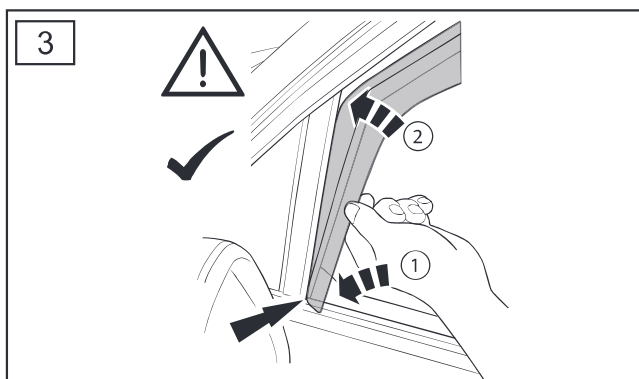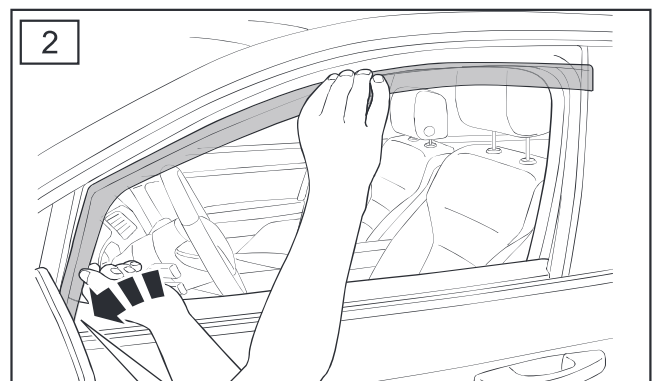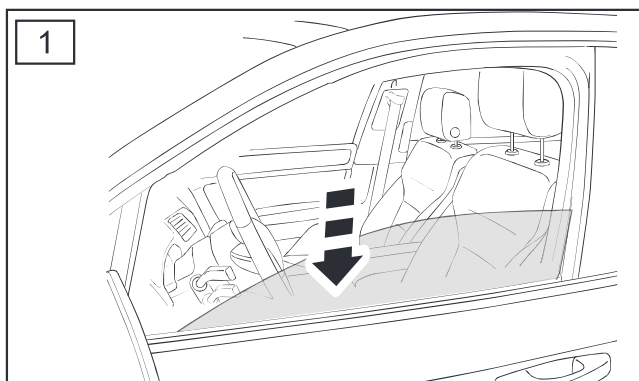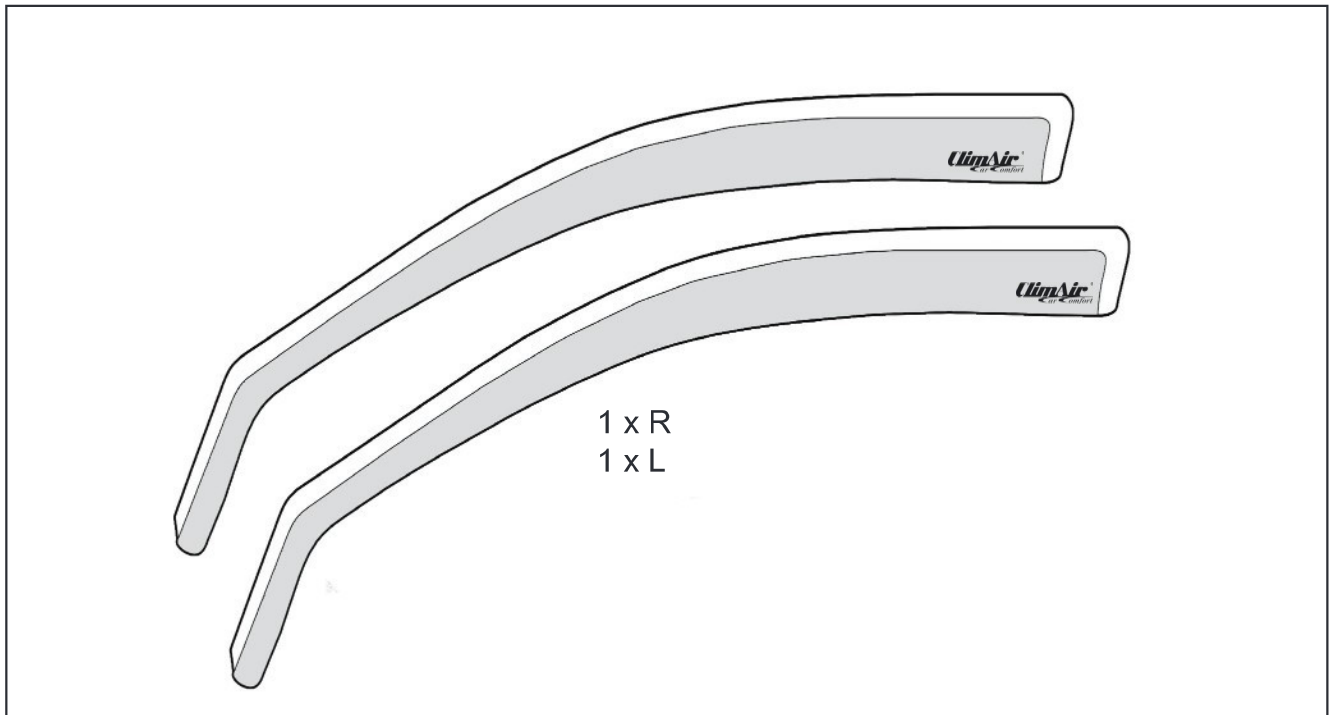

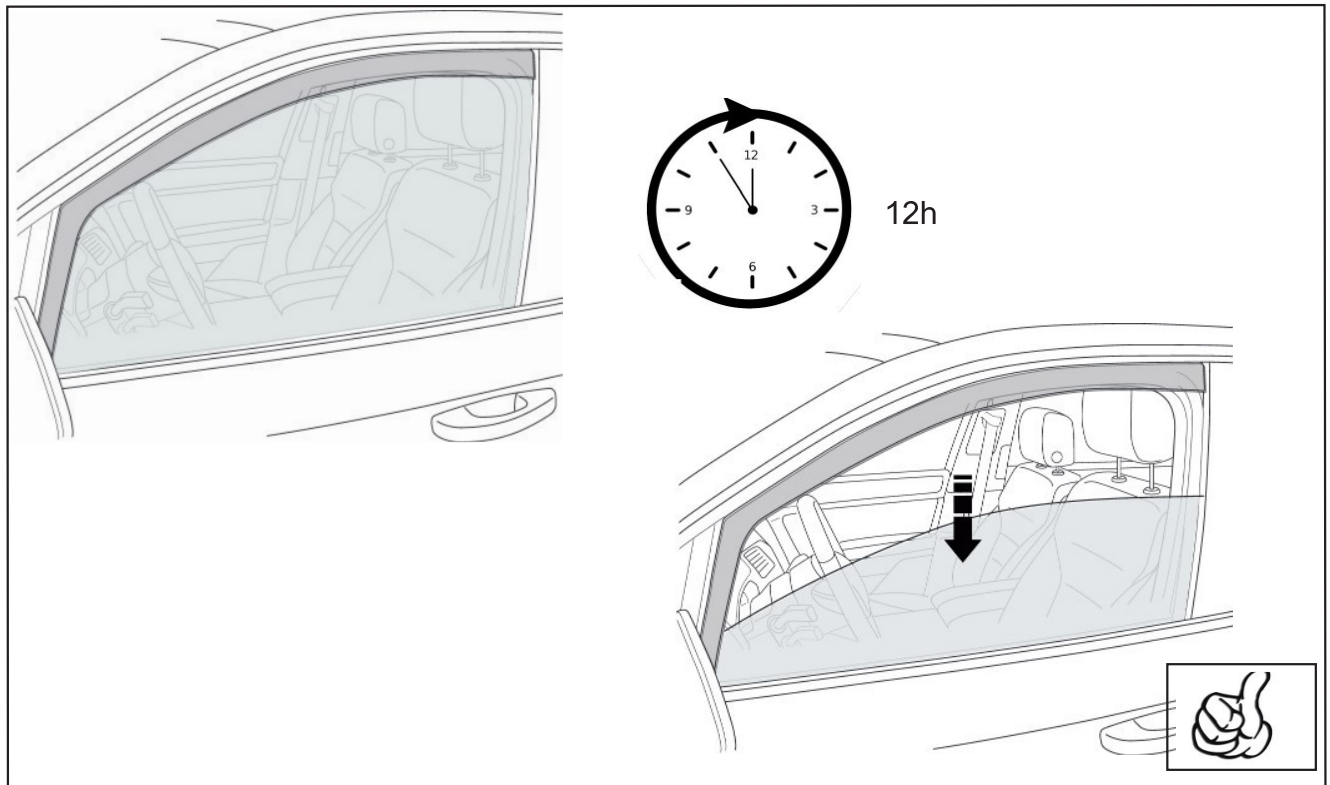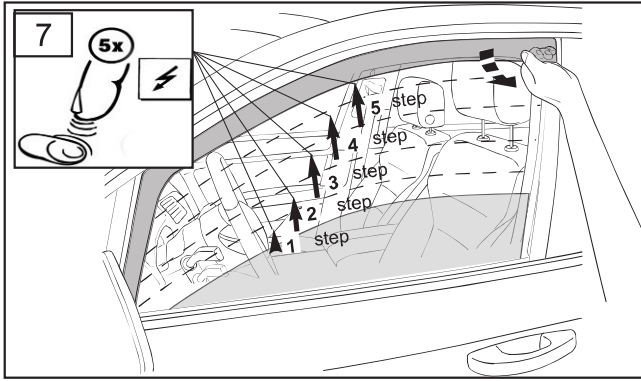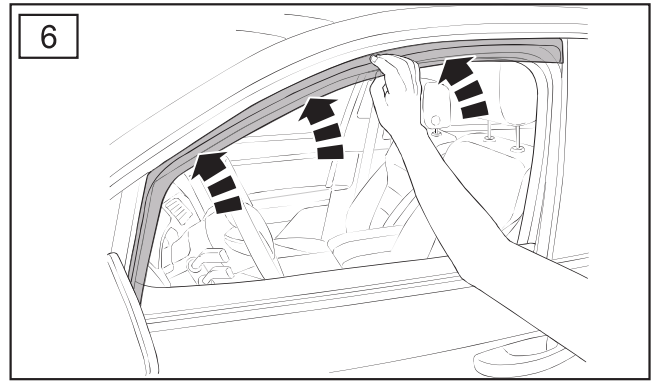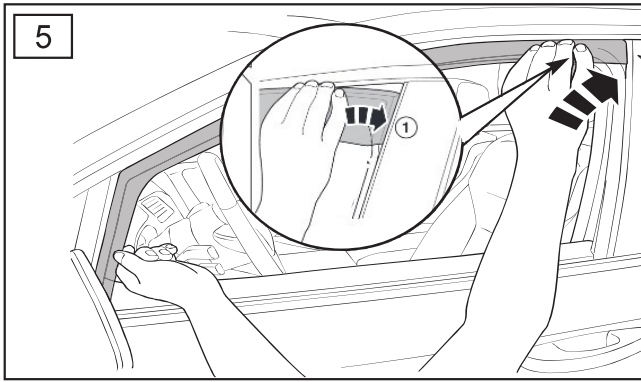

Weitere Informationen zum Einbau finden Sie unter:
 For more information on installation, see:
 Pour plus d'informations sur l'installation, voir:
 Para obtener más información sobre la instalación, vea:
 Для получения дополнительной информации по установке, см.:



www.climair.de/einbaufilm

Oder scannen Sie per Handy diesen QR-Code
 Or scan this qr-code with your handy

ClimAir[®]
car comfort

PLAVA Kunststoffe GmbH
 Am Spitzacker 20-22 - 61184 Karben
 Telefon: +49(0)6039 / 9 16 3-0
 Fax: +49(0)6039 / 21 85
 info@climair.de - www.climair.de