


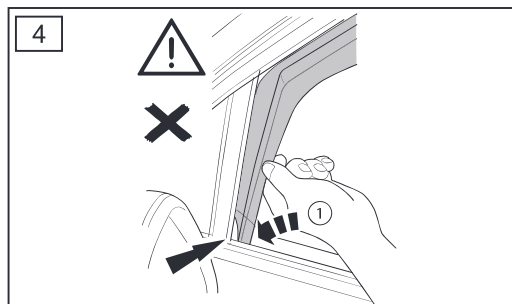
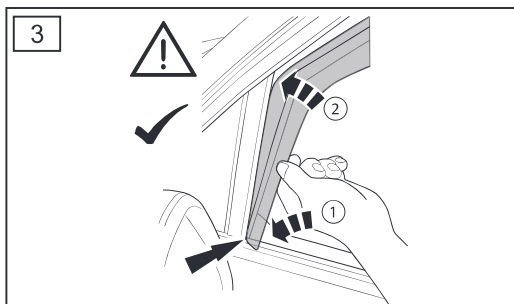
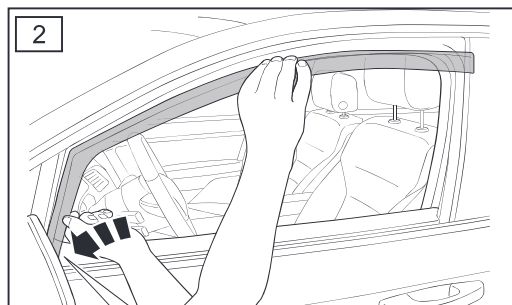
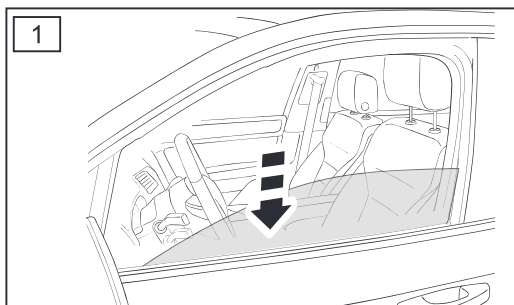
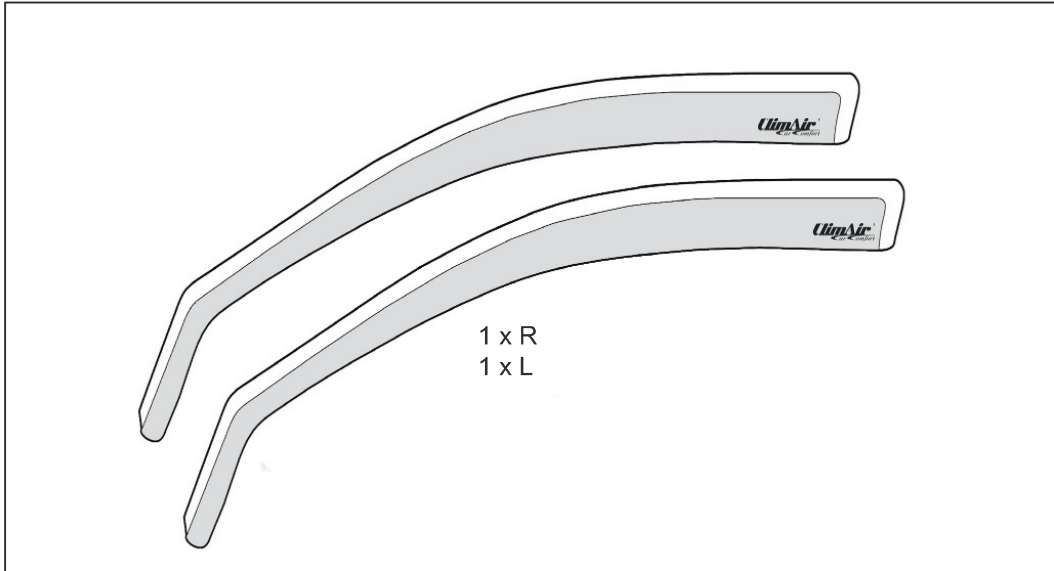
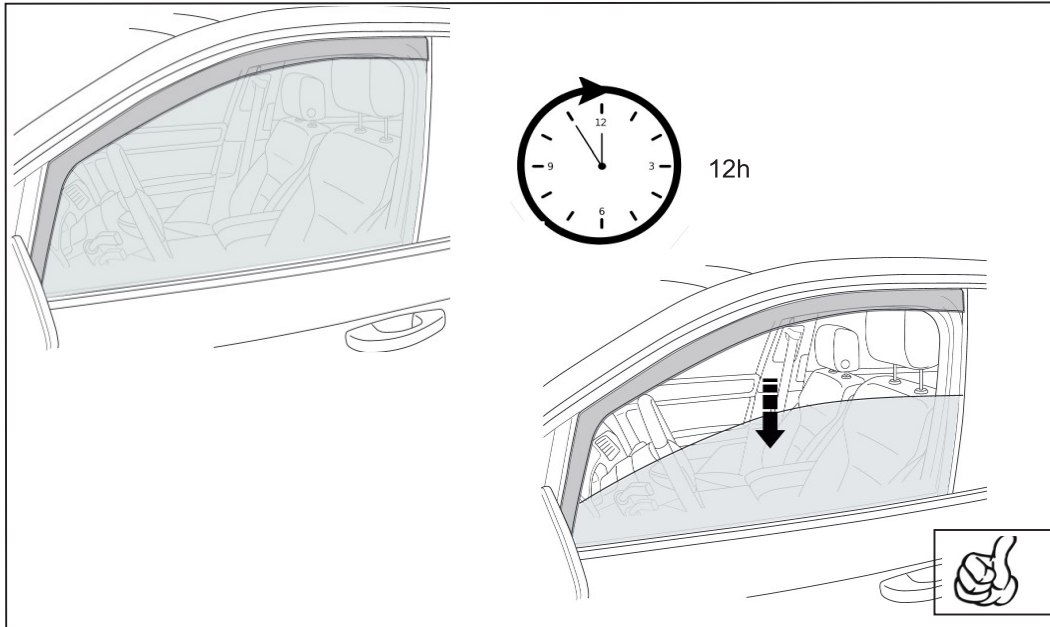


- D Einbauanleitung
- GB Installation instructions
- F Consignes de montage
- E Instrucciones de montaje
- RUS Инструкция по монтажу и установке

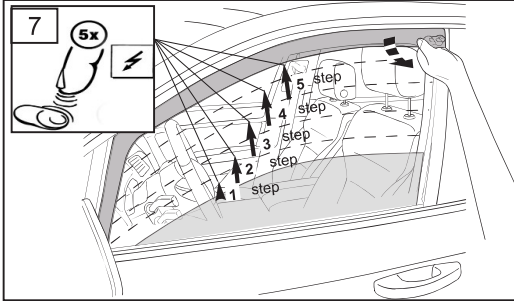

QR-Code - Einbaufilm Windabweiser
 QR-Code - Fitting film wind deflector

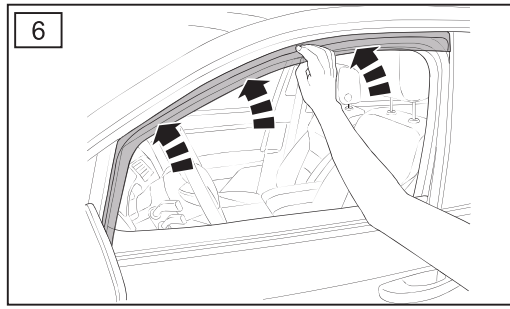

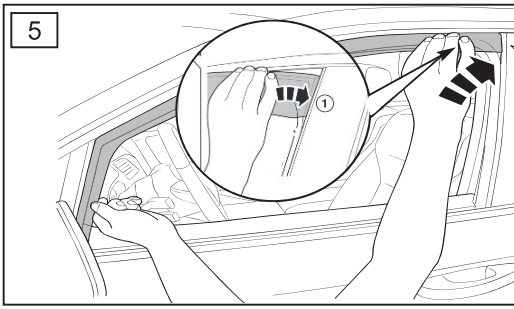

Weitere Informationen zum Einbau finden Sie unter:
 For more information on installation, see:
 Pour plus d'informations sur l'installation, voir:
 Para obtener más información sobre la instalación, vea:
 Для получения дополнительной информации по установке, см.:

www.climair.de/einbaufilm



Oder scannen Sie per Handy diesen QR-Code
 Or scan this qr-code with your handy

ClimAir[®]
Car Comfort

PLAVA Kunststoffe GmbH
 Am Spitzacker 20-22 - 61184 Karben
 Telefon: +49(0)6039 / 9 16 3-0
 Fax: +49(0)6039 / 21 85
 info@climair.de - www.climair.de