

Typ 3 461 22

Škoda Superb III. Limousine 06/15 →
 Škoda Superb III. Combi 09/15 →



ca ...30 min.

Milotec®


Auspuff-Dummy • Dummy - koncovky výfuku • Dummy exhaust • faux échappement

Montageanleitung • Montážní návod • Fitting instructions • Instructions de montage


Technische Änderungen vorbehalten • Technická změna vyhrazena • Subject to technical alterations • Sous réserves de modifications techniques

Lieferumfang • Obsah balení • The pack contains • Fournitures:

Ⓐ 1 x L

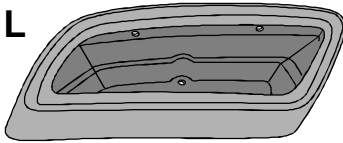


1 x R

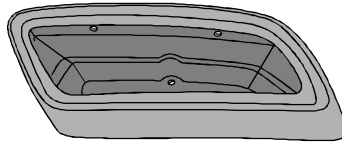


Ⓑ 1 x

Schablone

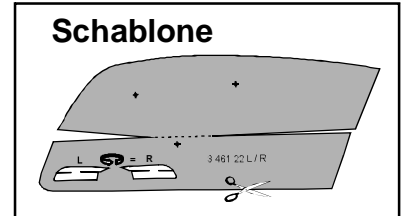



Ⓒ 6 x



Ⓓ 1 x



Gerät • Nářadí • Tools • Outils

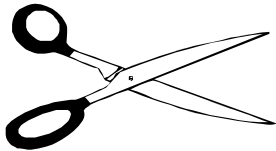

TORX 20

∅ 2,5 mm

